

# Placement of Case

Consider where the display case will be positioned relative to walls, ceilings, HVAC vents, windows, and other equipment discharging warm air.

## The 5' - 10' - 15' Rule

### Stay 5' away from an exterior window

Direct sunlight increases the heat load on the front of the display resulting in the refrigeration system having to work harder and possible condensation on the case.

With service display cases that have a glass front, air blowing on the front glass causes condensation to develop.

### Remain 10' away from HVAC ceiling vents

Air blowing on the front of the display interrupts the air curtain and causes product temperatures to increase.

### Position the display 15' away from exterior doors

Air drafts from the front exterior doors interrupt the air curtain, allowing warm air to penetrate the inside of the display, affecting product temperature.

Minimum 4" clearance to walls & ceilings.

Some models can be positioned right to the wall & ceiling.

Refer to spec sheets & design guide for further information.

