

## Why is my refrigerated merchandiser in ECO mode

Sometimes, adjustments that are made to the case's controller inadvertently place the refrigeration system into ECO mode. In this mode, the set point for the refrigeration system remains the same but with a different differential set point. This configuration reduces the number of compressor starts/stops and reduces energy consumption.

To remove the system from ECO mode:

### To turn ON/OFF ECO mode:

- Press and hold program
- --- will show on the display
- Press program
- dir will show on the display



- Press up/down until ECO is displayed
- Press program



- cycle between ON/OFF to desired setting using the up/down arrows.
- press program on desired ECO mode setting.



- "ECO" will be displayed once more and you can then let the controller "time out".